

# HomeVision Plugin for HomeSeer

## *Change Log*

HomeSeer Interface plug-in for the Custom Solutions Incorporated HomeVision

1-31-2007 version 2.0.0.7

- Modifications to error trapping/handling

6-14-2005 version 2.0.0.1

- Modifications to be HomeSeer 2 Compatible.

6-13-2003 version 1.0.9

Changes from version 0.0.5 to version 1.0.9

- Fixed problem with All Lights/Units Off

Changes from version 0.0.5 to version 1.0.7

- Fixed problem with HV variables not being set properly.
- Fixed preset dim transmission and receiving bug.

Changes from version 0.0.4 to version 0.0.5

- Dimming commands were reversed. (A 90% dim would be set to 10%. A 10% dim would be set to 90% .)
- Rewrote error handler to write more accurate error message to the log.
- Plug-in now reads settings from the HS INI file. It will move existing registry entries there.

Changes from version 0.0.3 to version 0.0.4

- Fixed a problem with dimming where all units on the same house code would dim at the same time, though only one was supposed to be addressed by the command.

Changes from version 0.0.2 to version 0.0.3

- Reworked initialization routine to abort quickly if HomeVision is not responding.
- Added error handling to all routines

Changes from version 0.0.1 to version 0.0.2

- Added support for COM1 - COM32

## ***What is it?***

This plug-in file "hspi\_homevision.ocx" allows HomeSeer to display the status of, and control, the following:

- X-10 devices connect to the HomeVision
- Infrared devices (send and receive)
- The first 64 (of 255) HomeVision variables (set and get)
- The first 64 (of 255) HomeVision flags (set and get)
- HomeVision relay outputs (set)
- HomeVision digital inputs (get)

## ***Requirements***

You must have HomeSeer version 1.5 in order to use this plug-in.  
All IR codes must be learned from within the HomeVision program.

## ***Installation***

1. To install the HomeVision plug-in for HomeSeer version 2.x, select the "Updater" button on the web interface, or select "Updates" from the "Help" menu. Follow the on-screen instructions for the Updater.
2. Select the HomeVision plug-in on the package selection screen, then follow the on-screen instructions to finish the update process, and restart HomeSeer.
3. After restarting HomeSeer, click the "Setup" tab and then the "Interfaces" tab on the web site. Click "Disabled" to enable the plugin, and then click "Save" at the bottom of the screen.

## ***Support***

For Support:

Help Desk: [www.homeseer.com](http://www.homeseer.com) (select ***HelpDesk*** from the ***Support*** menu)

Support is also available on our message board at:

<http://board.homeseer.com>

Look for the forum dedicated to the HomeVision plugin.