

IR Linc Plugin for HomeSeer

Requirements

- HomeSeer version 2.0.0.0 or greater is required.

Installation

1. To install the IR Linc plug-in for HomeSeer version 2.x, select the “Updater” button on the web interface, or select “Updates” from the “Help” menu. Follow the on-screen instructions for the Updater.
2. Select the IR Linc plug-in on the package selection screen, then follow the on-screen instructions to finish the update process, and restart HomeSeer.
3. After restarting HomeSeer, click the “Setup” tab and then the “Interfaces” tab on the web site. Click “Disabled” to enable the plugin, and then click “Save” at the bottom of the screen.

Features/Usage

This plug-in only supports the 1623PC version of the controller, not the X10 version.

The plugin supports learning of up to 1152 commands and 32 different devices.

Use the HomeSeer IR Config dialog on the View menu to learn commands from your existing remotes.

The IRLinc supports on detector probe. The plugin automatically creates one device that holds the On/Off status of this probe. Events can be triggered by the status of the probe.

Configuration

1. Select the IRLinc as your Infrared device in the infrared section on the interfaces tab in the HomeSeer options.
2. Learn your IR commands from the I/R Config menu off the View menu.
3. When a command is learned, it will display in RED in the IR keys list.
4. You may learn a command when the ACTIVE LED is flashing on the IRLinc unit.

Changed for version 1.0.0

Initial release of plug-in

Support

For Support:

Help Desk: www.homeseer.com (select *HelpDesk* from the *Support* menu)

Support is also available on our message board at:

IR Linc Plugin for HomeSeer

<http://board.homeseer.com>

Look for the forum dedicated to the IR Linc plugin.