

Rain8 and Relay8 Net Controllers RainRelay8 Release Notes

This document contains important information that is specific to the use of the Rain8 or Relay controller with HomeSeer software*

Installing the Controller

1. Using the *Updater* in HomeSeer, download and install the installation package titled *RainRelay8*. Restart HomeSeer when prompted to do so, HomeSeer will install the RainRelay8 Plugin which works with both the Rain8 and Relay8 Controller.
2. Attach the controller to both its power supply and a free serial port on the computer running HomeSeer.
In HomeSeer, click on *Setup* and the *Interfaces* tab. Click on the word *Trial* next to the RainRelay8 Plugin. Choose *Online* for registration type and input the License ID and Password proved at the bottom of this page.
3. You can now enable the plugin over the desired com port on the *Interfaces* tab by clicking on the gray button labeled *disabled* and clicking save.

Configuring the Controller in HomeSeer HS2

1. After the plugin has been enabled you can configure it by choosing *Config* on the interfaces tab. The first thing you will want to do is program the address of the controller. At the bottom of the RainRelay8 configuration page input the address you would like to assign to the controller (1 - 255) and click *Program Controller*.
2. You can now add this controller number to the list of controllers.
3. Once the controller has been added to the list, select it and choose *Create Devices* to generate 8 HomeSeer devices representing the 8 valves or relays.
4. You can now control the valves or relays just as if they were any other HomeSeer Device.

Your RainRelay8 Plugin License ID and password are below.



For support visit our website at:

<http://www.homeseer.com/support/index.htm>

More support is available on our message board at:

<http://board.homeseer.com/>

Select "Updates" from the HomeSeer Help menu to download the latest version of our software and try our add-on software.