



HS-DS100+ Z-Wave Door / Window Sensor

OVERVIEW

HS-DS100+ is a battery operated sensor that is designed to issue Z-Wave commands when doors or windows are opened or closed. HS-DS100+ may be associated directly with other Z-Wave devices or it may be used with a wide variety of Z-Wave hubs and controllers to trigger events, scenes and other automations.

Jamb Sensor Body Magnet Piece Door Gap should be 10mm or less


Operation

HS-DS100+ is comprised of a sensor body and a magnet piece. The sensor body is (typically) installed on a door or window jamb. The magnet piece is (typically) installed on the door or window. When the door or window are closed, the magnet trips a switch inside the sensor body and a Z-Wave command is issued. When the door or window are opened, the switch is tripped again and another Z-Wave command is issued.

Physical Installation

The sensor body and magnet piece must be mounted to the door or window (vertically or horizontally) using the provided screws or double-stick tape (your choice). Leave a gap (no wider than 10mm) to allow the door or window

to open and close easily without obstruction. If using screws, you'll have to the mount the backing plates of the sensor body and magnet pieces first. To do this, press the latch button on the sensor body and gently pry off the backing plate (plate can be difficult to remove). Then, use a small slotted screw-driver to remove the backing plate from the magnet piece.

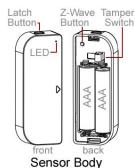

Z-Wave Network Installation

Door/Window Sensor can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

Inclusion (Use this procedure to add the HS-DS100+ to your Z-Wave network).

- 1. Ensure AAA batteries are installed. Remove any plastic from battery compartment (if necessary)
- 2. Put your home automation controller into 'inclusion' mode. Consult your system's manual for details.
- 3. Triple-click the Z-Wave button inside the sensor body. Wait for the process to finish.
- 4. If successful, the sensor body LED will blink briefly and then stay on for 3 seconds. If unsuccessful, the LED with blink briefly and then turn off. Should this happen, repeat the inclusion process.

Note: If you want this Door/window sensor to function as a security device using secure/encrypted Z-Wave communications, then a security enabled Z-Wave controller is required.

Exclusion (Use this procedure to remove the HS-DS100+ from your Z-Wave network).

- 1. Put your home automation controller into 'exclusion' mode. Consult your system's manual for details.
- 2. Triple-click the Z-Wave button inside the sensor body. If successful, the LED will turn off within 1 second. If unsuccessful, the LED with blink for 5 seconds. Should this happen, repeat the exclusion process.

Reset (Use this procedure to reset the HS-DS100+ to factory default settings when the network primary controller is missing or otherwise inoperable).

1. Press and hold the Z-Wave button inside the sensor body for 20 seconds, the LED will stay on until release the button.

Z-Wave Association Information

HS-DS100+ supports Group 1 and Group 2 associations. Group 1 reports the sensor's condition, battery level and tamper state. Group 2 sends the BASIC SET command.

Battery Information

HS-DS100+ is designed to report its battery condition once every 24 hours. A battery level report can also be manually invoked by pressing the Z-Wave button.

S2 Security

HS-DS100+ supports Z-Wave S2 security in unauthenticated mode.

ADDITIONAL INFORMATION

Please visit our website for the latest information about HS-DS100+ (https://homeseer.com/support-home/)

ADVANCED CONFIGURATION			
Parameter	Settings		
15	Value of BASIC SET 0-Sends 0xFF for open and 0x00 for closed 1-Sends 0x00 for open and 0xFF for closed 0-Default 1 byte—Parameter size		
32	Defines value of LOW BATTERY 10-50 (10%-50%) 20-Default 1 byte—Parameter size		

SPECIFICATIONS					
Operating Temp Range	0ºC to 40ºC	Power Supply	Requires (2) AAA 1.5V Batteries		
Z-Wave Frequency Range	908 MHz (US) Up To 300 Ft line of sight	Dimensions	Sensor Body: 3 x 1.1 x .75 inches		
Z-Wave Certification	Z-Wave Plus		Magnet Piece: 3 x .5 x .75 inches		

LIMITED WARRANTY

HomeSeer Technologies, LLC will repair or replace, at its option, any part of the device, which proves to be defective in workmanship or material under normal use, in the USA except in the states of Alaska or Hawaii, for a period of one year from the date the device is purchased. During the warranty period, HomeSeer Technologies, LLC will repair and provide all parts necessary to correct such defects, free of charge, provided the device has been operated in accordance with the manufacturer's guidelines. The Customer will return the device to HomeSeer Technologies, LLC for testing and repair or replacement. Should you need service, during warranty period or beyond, contact HomeSeer to obtain return authorization before shipping your device to HomeSeer Technologies, LLC.